

INSTRUCTIONS FOR INSTALLATION FOR MODEL # RACE-RB-ADJ, 10" x 30°/45°/60°/90° ADJUSTABLE ROOFING BRACKET

WARNING! FAILURE TO FOLLOW INSTRUCTIONS PROPERLY CAN RESULT IN SERIOUS PERSONAL INJURY!

CAPACITY: One worker per 8 feet of scaffolding or up to 250 pounds of materials

GENERAL REQUIREMENTS:

- 1 – Only for use on roofs
- 2 - Always use fall protection in accordance with local, state and federal OSHA regulations
- 3 - Not an anchor point
- 4 - Roof brackets are meant for use by experienced tradesmen having full knowledge in its use
- 5 - OSHA regulations require that the employer provide training in the use and care of this product

INSTALLING ROOF BRACKET:

- 1 - All brackets shall be attached to the roof with 20-penny nails. Use all slots on mounting plate
- 2 - Position bracket so that all nails penetrate both the roof's surface and the rafter below
- 3 - Spacing between brackets shall not exceed 8 feet

INSTALLING PLATFORM:

- 1 - Wood platforms shall not be less than 2 inches nominal thickness and shall extend beyond the support arm not less than 6 inches and not more than 12 inches
- 2 - Always use clear, straight-grained wood free from knots or defects
- 3 - If extended length platforms are required, use additional Roof Brackets every 8 feet
- 4 - Secure to bracket by nailing the platform to the bracket using the hole provided in the platform retainer

INSTRUCTIONS FOR USE:

- 1 - No more than one person shall occupy any given 8 feet of a Roofing Bracket Scaffold
- 2 - Use the walking surface to stage material and ease working on steep slope roofs.
- 3 - Always use OSHA compliant fall arrest system, guardrails, catch platforms or other safety equipment as required by Local, State or Federal OSHA Regulation
- 4 - Roof Brackets are intended for use by the experienced tradesman
- 5 - OSHA Regulations require that employers provide training in the use and care of this product

CARE AND MAINTENANCE:

- 1 - Inspect all Roofing Brackets before each use to be sure that there is no damage or deformation, or deterioration from rusting - Discard if necessary
- 2 - Do not throw or drop any equipment from height
- 3 - Do not use if exposed to extreme heat or cold - Discard at once
- 4 - Do not use if wet or frozen